

## ENGLISH

# Safescan 2000 Mini Banknote Counter

## INTRODUCTION

Thank you for purchasing the Safescan 2000 series mini banknote counter.

The 2000 series is a high quality portable banknote counter with outstanding performance and convenience. Its compact and stylish design make it an invaluable tool for quick and reliable counting at speeds up to 600 bills per minute. The unit also performs addition operations.

The 2000 series can be used with batteries or run from the enclosed 220V/50Hz. adapter.

## WARNING

- This product should be operated only from the power source indicated in the user manual. Only use the AC/DC adapter provided with the unit.
- Only use high quality batteries.
- Before turning the power on, please make sure that there are no objects obstructing the operation of the rollers and wheels.
- Don't place or operate the machine under strong light. This will cause inaccurate counting.
- Don't place the machine in area's with high temperature or in area's with high humidity. This will cause leakages of electricity and a risk of electric shocks and may cause inaccurate counting.
- When you have finished counting, switch off the machine.
- When the product is not used for a longer period of time, remove the adapter from the power source and remove batteries from the product to avoid leakage.

## I. GENERAL CONTROLS AND PARTS

### A. PARTS OF THE MACHINE.



1. Add button
2. Start button
3. Low battery indicator
4. Screen
5. Counting sensor
6. Counting wheel
7. Protective cover
8. Pivoting feeding surface
9. Counting guide
10. External adapter
11. Battery cover



## 2. BEFORE STARTING

Connect the supplied adapter to the unit and plug the adapter to a power outlet.

When operating the unit on batteries, put the 4 "AA" batteries in place and close the battery cover. The unit is now ready for operations.

## 3. OPERATIONS

Turn the unit on by pressing the ON/OFF switch on top of the unit.

Open the protective cover (7) and place the counting guide (9). The digital display (4) will come on and indicate '0'. The machine is ready for counting.

Make sure the bills are properly aligned and squared. Gently press the feeding surface (8) and place the bills inside

## ENGLISH


the machine between the feeding surface and the counter wheel (6)

Once the bills are properly placed, press the START button on top and counting will start. The quantity of bills will be shown on the screen. To perform a recounting, press the CLEAR button and press START again.

NOTE: We recommend to count the same batch of bills more than once to ensure accuracy of the counting result.

## ADD FUNCTION

The Addition function allows you to quickly count and add multiple stacks of bills. The addition result will be shown on the display.

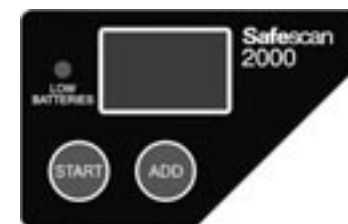

### To start the ADD function:

- Count a stack of bills as indicated above
- Remove the counted bills
- Place a new stack of bills to count and press ADD. This function will add this second stack of bill to previously counted stacks
- Maximum count is 999 bills

## 4. ERROR MESSAGES

Error codes:	Reasons	Solutions
E-0	Low batteries	Replace the batteries
E-1	Obstruction of the bottom sensor	Clean the sensor and/or counting wheels
E-2	Obstruction of the top sensor	Clean the sensor and/or counting wheels
E-3	Bills are not aligned or have been set improperly	Square the bills, reset the unit and recount the bills
	Low traction power on the counting wheel	Replace the batteries

## 5. SPECIFICATIONS

**Weight:** 450g (battery contained)

**Dimensions:** min. 190 x 102 x 75 mm.

**Speed:** up to 600 bills per minute (approx)

**Countable stack quantity :** 120 new banknotes, 100 for old banknotes (approx.)

**Display:** 3 digits max. 999

**Power supply:** 4 "AA" alkaline batteries or AC/DC 220V/6V external adapter.

**Power Consumption:** 2Watts

**Battery life:** up to 150.000 notes or more when using alkaline batteries